



Critical Tensioning

Setting proper tension will make or break your installation.

Each of the 3 visible hex head screws is used to set an axis tension. Tension should be set just tight enough that the visor adjusts easily by hand but remains in place when released.

Over tensioning can result in breaking the lens when repositioning or in damage to the mount.

**Three tension
adjusting screws**

